

The Genuine. The Original.



Overhead Door Company of Joliet

## GENIE WIRELESS (SLIDE UP COVER)



Transmitter Switch Settings

1 2 3	4 5 6	7 8 9	10 11 12
up	up	up	7
up	up	down	6
up	down	up	5
up	down	down	4
down	up	up	3
down	up	down	2
down	down	up	1
down	down	down	0

Resulting Security Code

-----

**PLEASE NOTE:** DURING 2000, THE FACTORY MODIFIED THIS KEYPAD. IF THE KEYPAD DOES NOT WORK AFTER FOLLOWING THESE DIRECTIONS – TRY REPEATING THE DIRECTIONS BUT SKIP **STEP #2**

**BATTERY:** Access Panel is at the bottom edge of the keypad.

**TO OPERATE:** Depress area and slide down. Light should come on when cover is raised.

### RESET KEYPAD:

1. Open cover on keypad just enough to press "#" & "8" at the same time. While pressing these keys, raise the cover all the way (*this erases the old code*). Release the buttons.
2. **Close the cover. Open cover fully.**
3. Press numbers "3", "5", "7", and "#". The red light should be blinking about once a second.
4. Enter your new PIN number and press #. The red light should be blinking faster.
5. Enter the security code number and press "\*" - red Light will turn off.
6. Close keypad cover fully.
7. Slide keypad cover open fully and enter the pin number and press "\*" to test with your new code number.

### TO CHANGE PIN # WITHOUT RESETTING KEYPAD:

1. Open cover fully.
2. Enter OLD pin number and press "#" - *red light will blink slowly*.
3. Enter the NEW pin number and press "#" - *red light will blink faster*.
4. Press "\*" - *red light will turn off*.
5. Close keypad cover.
6. Slide keypad cover open fully and enter pin number and press "\*" to test with your new code number.

**NOTE:** On a 456 Operator, press the far-right button in the cut-out area to program a new transmitter.  
***THIS IS FOR "O-SERIES" TRANSMITTERS ONLY.***